

TRAY SLIDE UNIVERSAL

[Heated Cabinet] 2 section left or right

INSTALLATION MANUAL

ITEM ①



H50H113930
(POST TRAY SLIDE UNIVERSAL_50_HEATED CABINET)

X 2 EACH

ITEM ②



H50H113940
(POST M TRAY SLIDE UNIVERSAL_50_HEATED CABINET)

X 2 EACH


ITEM ③



H26R107640
(BUN PAN STOPPER)

X 1 EACH

ITEM ④

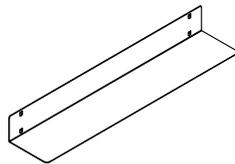

H26R104470
(TRAY SLIDE UNIVERSAL)


X 14 EACH

ITEM ⑤



7142401303
(SCREW M4*13 DELTA COATING #8 1/2)

X 37 EACH

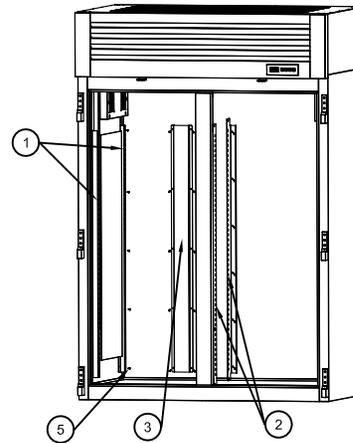

1 INSTALLING POSTS AND BUN PAN STOPPER

INSTALL ITEM 1 WITH ITEM 5 TO BOTH SIDES OF CABINET LINER

TWO POST ON EACH SIDE FACING INWARD AS SHOWN

INSTALL ITEM 3 WITH ITEM 5 TO THE REAR OF CABINET LINER

HAVE THE FINISHED SURFACE OF ITEM 3 FACING OUTWARD AS SHOWN

DISASSEMBLE SHELF PILASTERS ON BACK PANEL AND MULLION, USE HOLES TO INSTALL ITEM 2 WITH ITEM 5

THERE ARE PRE-DRILLED HOLES TO INSTALL ITEM 1, 2, AND 3




2 INSTALLING TRAY SLIDES

INSTALL ITEM 4 INTO ITEM 1 & 2 AS SHOWN

TRAY SLIDE HOOKS SHOULD BE POSITIONED INSIDE OF RECTANGLE OPENING (SEE "A")

TRAY SLIDE ALIGNMENT (ON EACH POST) SHOULD BE ON THE SAME RECTANGLE OPENING.

REPEAT INSTALLMENT OF TRAY SLIDES 7 SETS

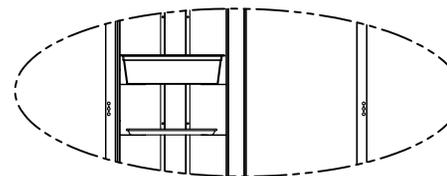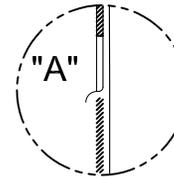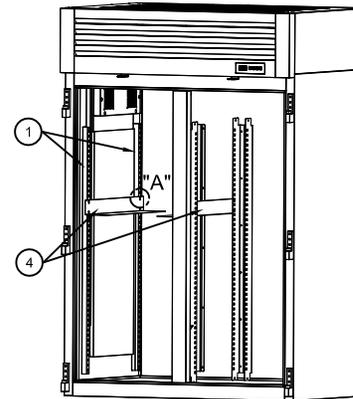

3 INSTALLING BUN PANS & PANS

TRAY SLIDES UNIVERSAL USE
18" X 26" BUN PANS
18" x 14" BUN PANS
FULL SIZE PANS

Note

This installation is for Left section. Right section installation is mirror of Left section installation.

H50H721230